

# Setting Up

## New Device:

1. Download the Cricut Design Space app on the new device
2. Select Sign In
3. Use the email and password on the left side of the Cricut to sign in
4. After clicking “make”, click “set up a cutting machine.”
5. Select Cricut Maker 4
  1. Follow the directions below for "Previously Connected Device" at this point

## Previously Connected Device:

1. Open the Cricut by pulling the metallic/darker pink top part upwards
  1. After doing so, press the power button (right side, above the three other buttons. It looks like a traditional on/off button.)
2. Plug the device into the Cricut using the USB-C cord that is connected to the Cricut (often already laid out next to it on the left side. If not there, look behind the Cricut to find the USB-C cord. It should be connected on the bottom-right side of the Cricut.)
3. After plugging in the device, open the Cricut Design Space app
  1. If you get logged out, just log back into the Cricut Design Space app using the email and password located on the left side of the Cricut

---

Revision #2

Created 2026-04-02 18:16:42 UTC by Febronia Farowez

Updated 2026-05-05 20:00:54 UTC by Febronia Farowez