

When Done

Once you're done with the Cricut, you need to clean up your space. Here's how to do it:

1. Unplug the computer being used from the Cricut, close out of Design Space and any open tabs, and put it back in the original location it was taken from
 1. Delete any files you no longer need from the computer
 2. Be sure to plug it back into its charger when you return it
2. Press the power button to turn the Cricut back off
3. Push the light pink, plastic part of the Cricut up back into place until it "clicks"
4. Push the metallic, dark pink part down on top
5. Clean any remaining trash and throw it away, return all Cricut tools to their original location(s)

Revision #1

Created 2026-05-05 19:53:30 UTC by Febronia Farowez

Updated 2026-05-05 19:58:57 UTC by Febronia Farowez