




MANUS Core Setup

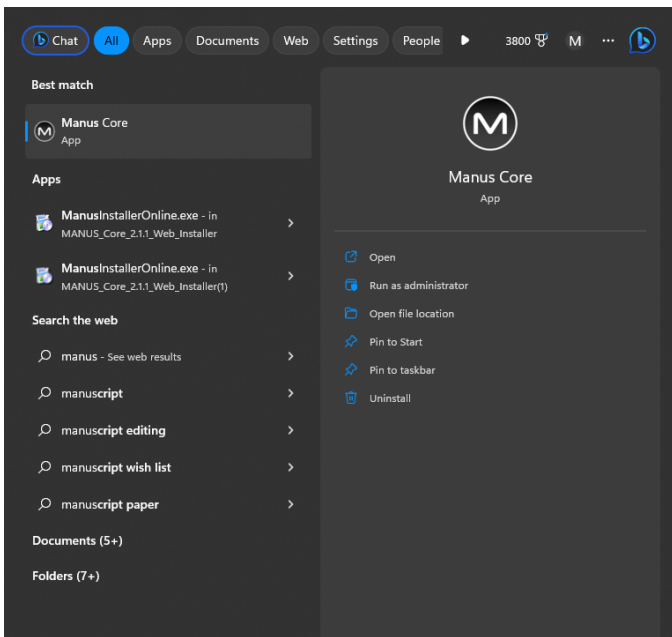

ations. These can be accessed either by searching
top.

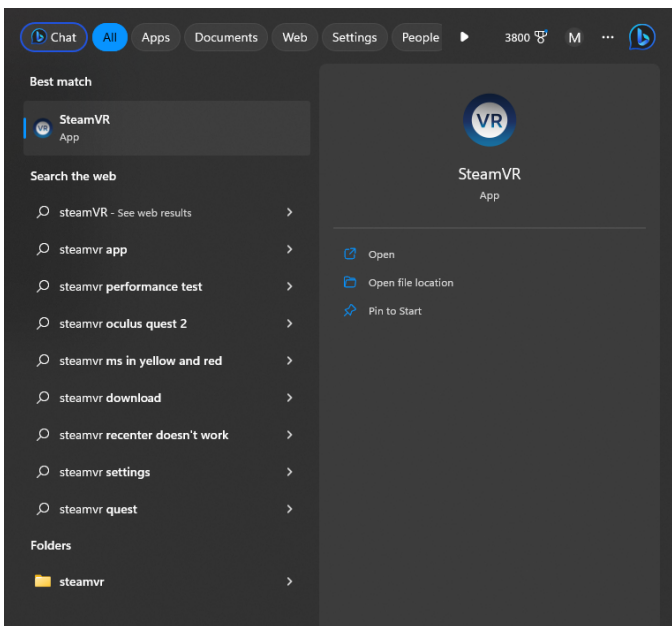


2. Approach the actor and activate all eight VIVE trackers along with both gloves. The VIVE trackers are equipped with a triangular button on their face; press this for one second and then release. A white light should blink, followed by a steady green light, signaling a successful pairing. Confirmation of this can also be observed in the SteamVR mini window, where the outline of the added tracker will be displayed. Regarding the gloves, an on-off switch is situated near the wrist. Slide this button to the on position, and a white and blue light should flash from the glove's LED. Once the flashing ceases and a solid blue light appears, the glove is successfully connected.

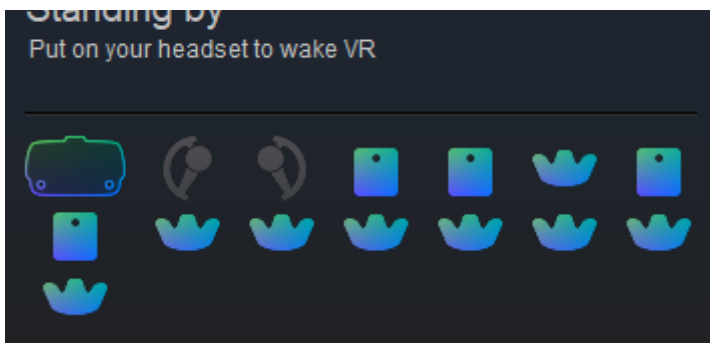

Note: In the event of any connection issues, please refer to the troubleshooting page for assistance.

3. Once all devices are connected, navigate to the profile settings tab next to the user's tab in the MANUS Core software, where you will assign the trackers to the corresponding body parts. Each tracker possesses a unique color and is represented in the scene view. Communicate with the actor, asking them to raise or move specific body parts to facilitate tracker assignment. Upon correct assignment of all trackers, a 3D mesh should materialize on the actor within the scene view.



R

L

Gloves (2)

Calibrate

Dongle

2E8FB4BA Quantum

Left Glove

816AD22A Quantum

Right Glove

6AE30612 Quantum

Trackers (8)

Calibrate

Head

LHR-4F59F57B

Waist

LHR-B3F2EF94

Left Hand

LHR-5E364D7E

Left Arm

LHR-10F9AEDC

Left Foot

LHR-DB715295

Right Hand


LHR-7D086D4C

Right Arm


LHR-5E731088

Right Foot


LHR-AB11DC8E

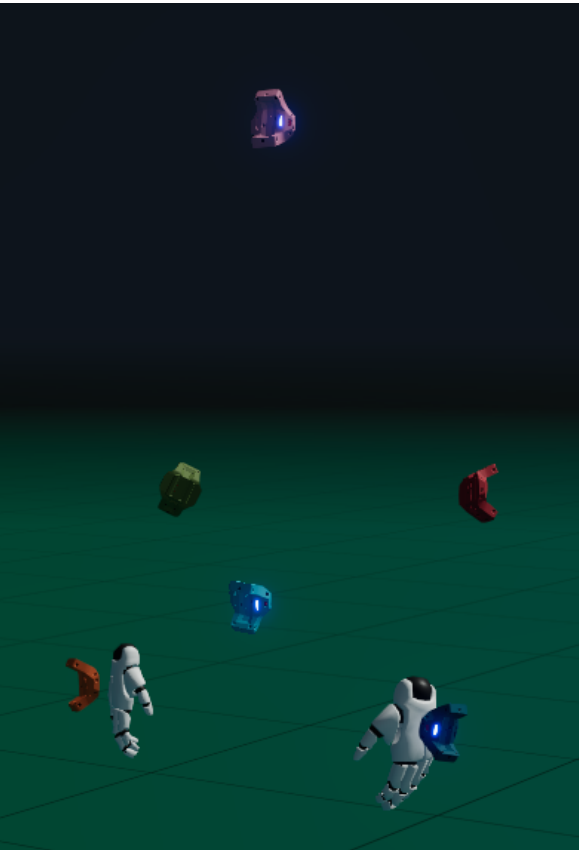

Different views: The MANUS Core software features two different views - hands view and scene view. These options are situated on the right-hand side of the page, adjacent to the Users tab.

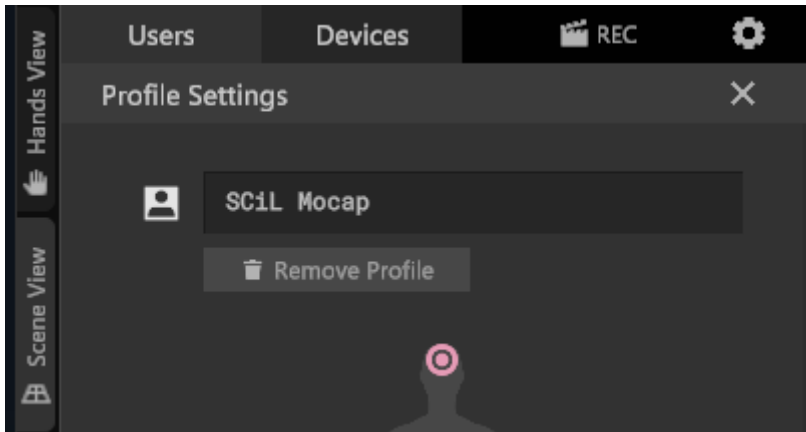


Note: While the mesh skeleton may not appear perfect, it is important that the arms and legs are not crossed. If they are, this suggests that the trackers have been assigned incorrectly to the opposite body part.

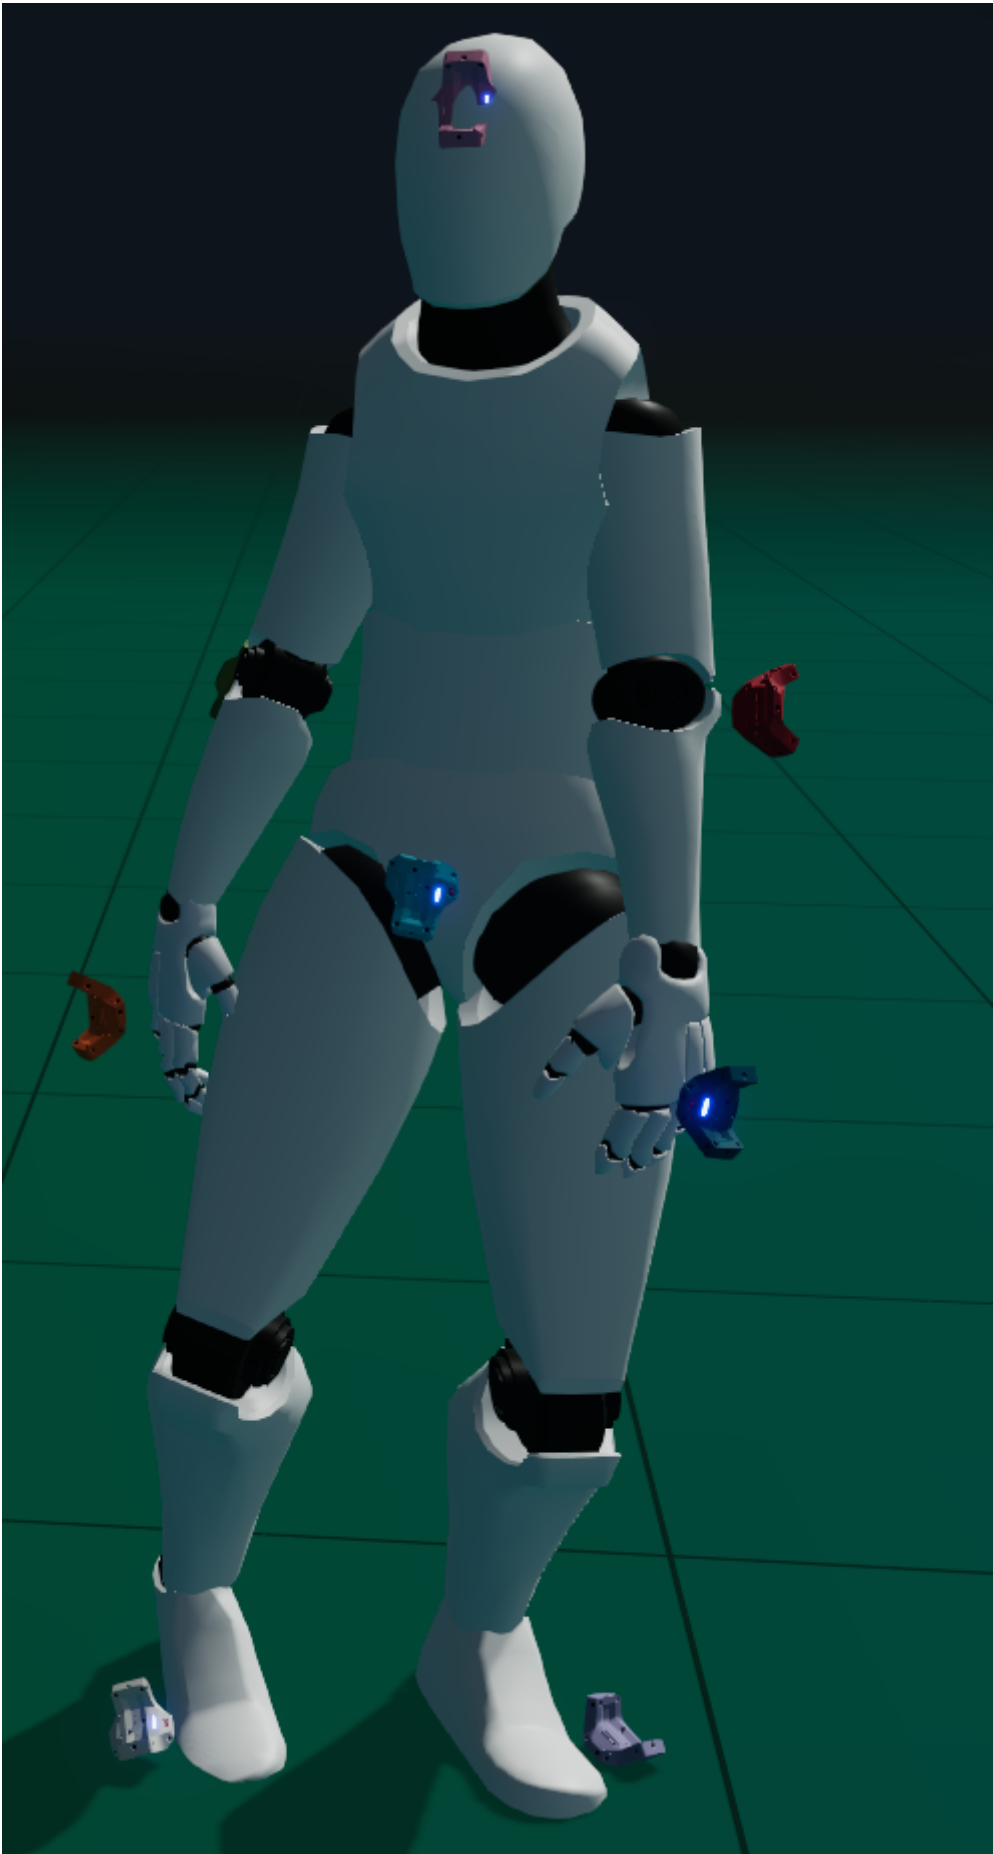

4. Transition to the hands view and verify that both hands are visible as a 3D skeletal hand. If both are not present, consult the troubleshooting page for assistance.

Note: The skeletal hands/fingers should mimic the actor's movements. However, if certain fingers appear bent incorrectly and are unresponsive, do not be alarmed. The hands have yet to be calibrated.

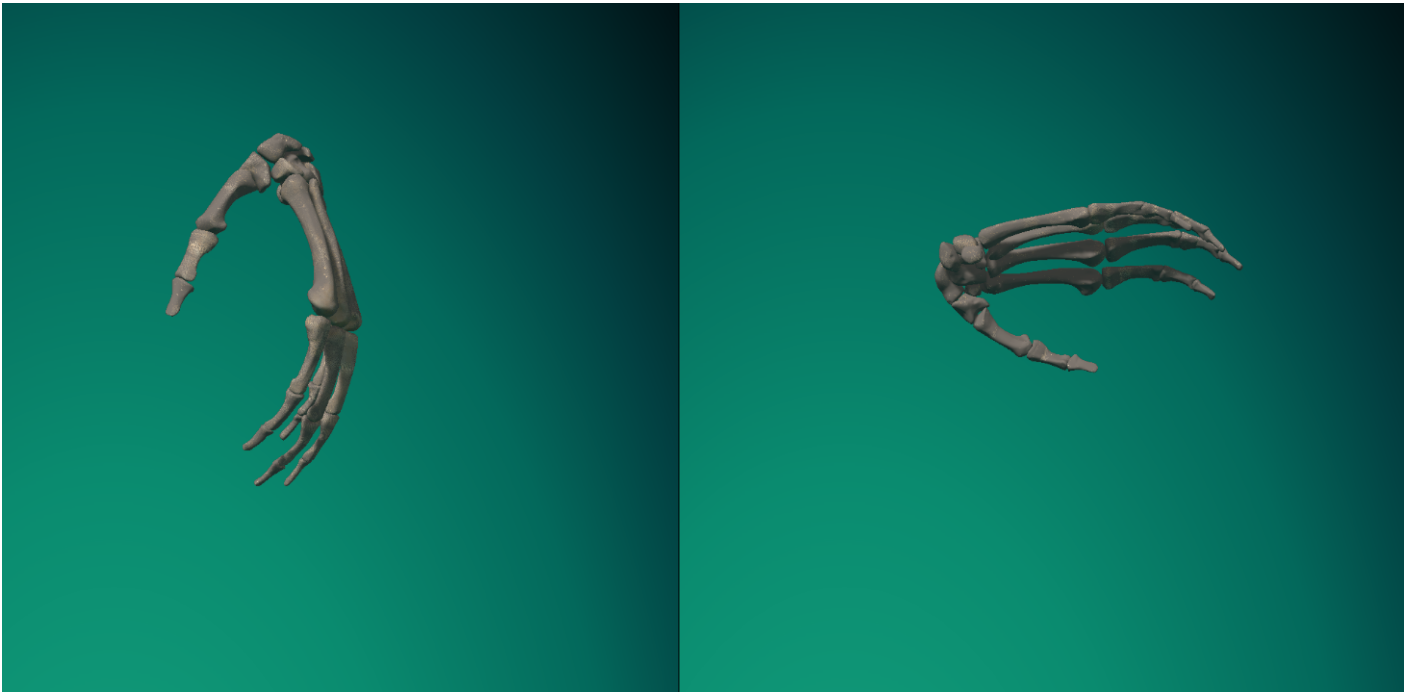

5. Once everything is connected and assigned correctly, you may proceed to calibrate the hands and body trackers. Refer to the MANUS Core Calibration page for step-by-step instructions.

Revision #2

Created 7 November 2023 15:00:46 by BaggoNotes

Updated 5 January 2024 16:10:13 by BaggoNotes